



Switch functions Betjeningspanelets funktioner

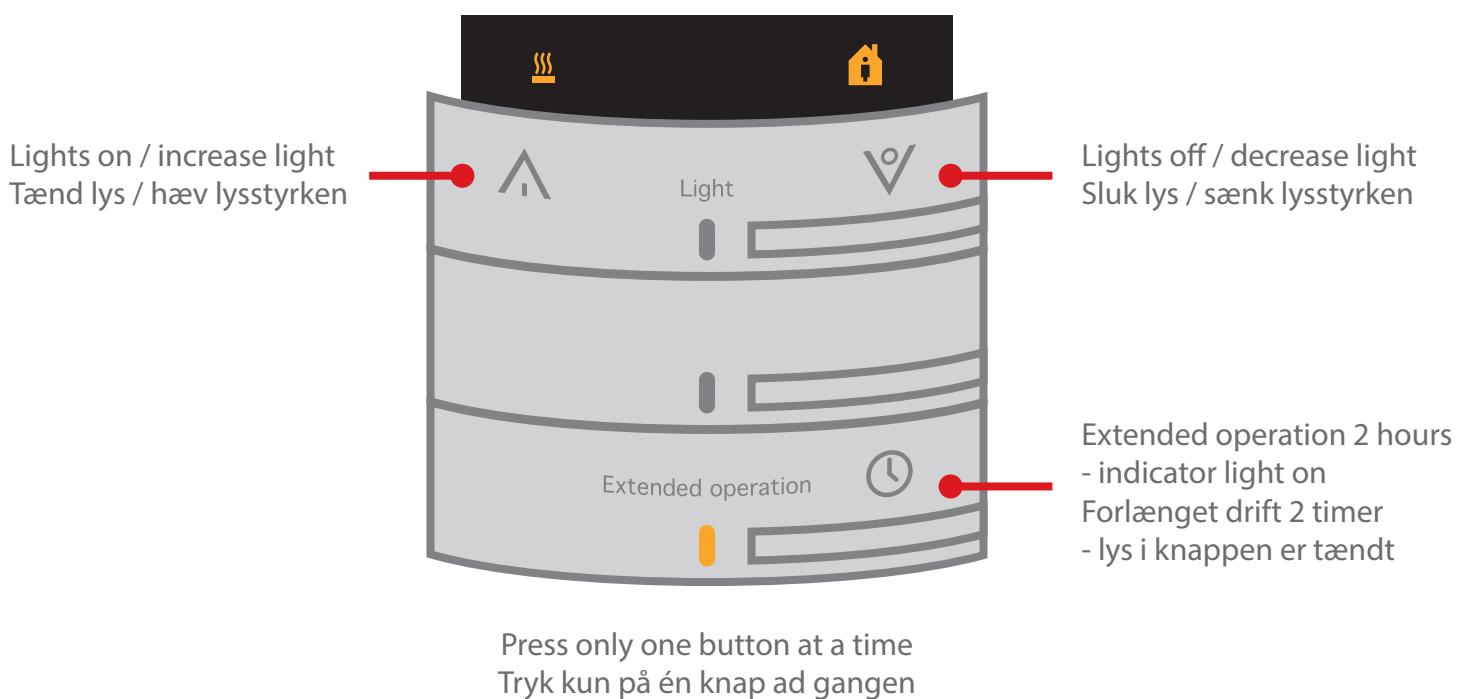

Setting room temperature Indstilling af rumtemperatur

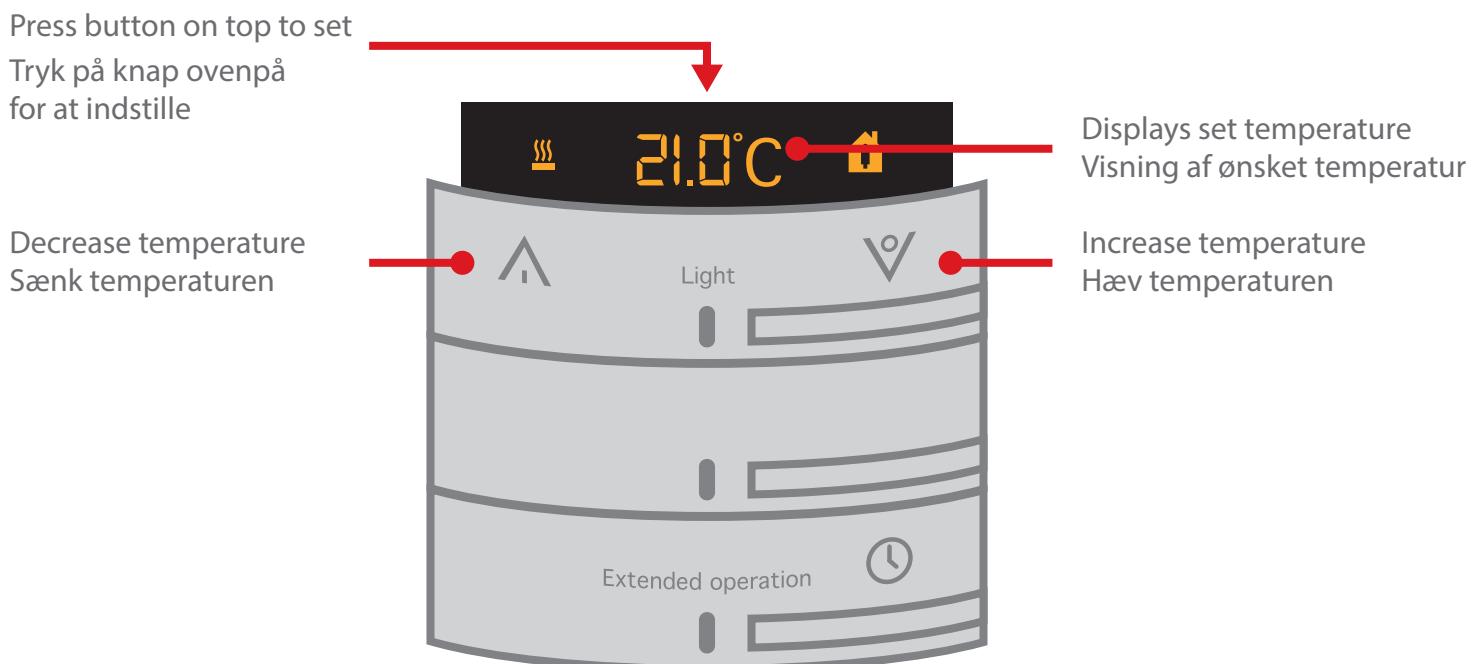

Temperature resets to default every night. Desired temperature must be entered each day.
Varmen returnerer til basis hver nat. Ønsket temperatur i rummet skal stilles hver dag.