



Switch functions Betjeningspanelets funktioner

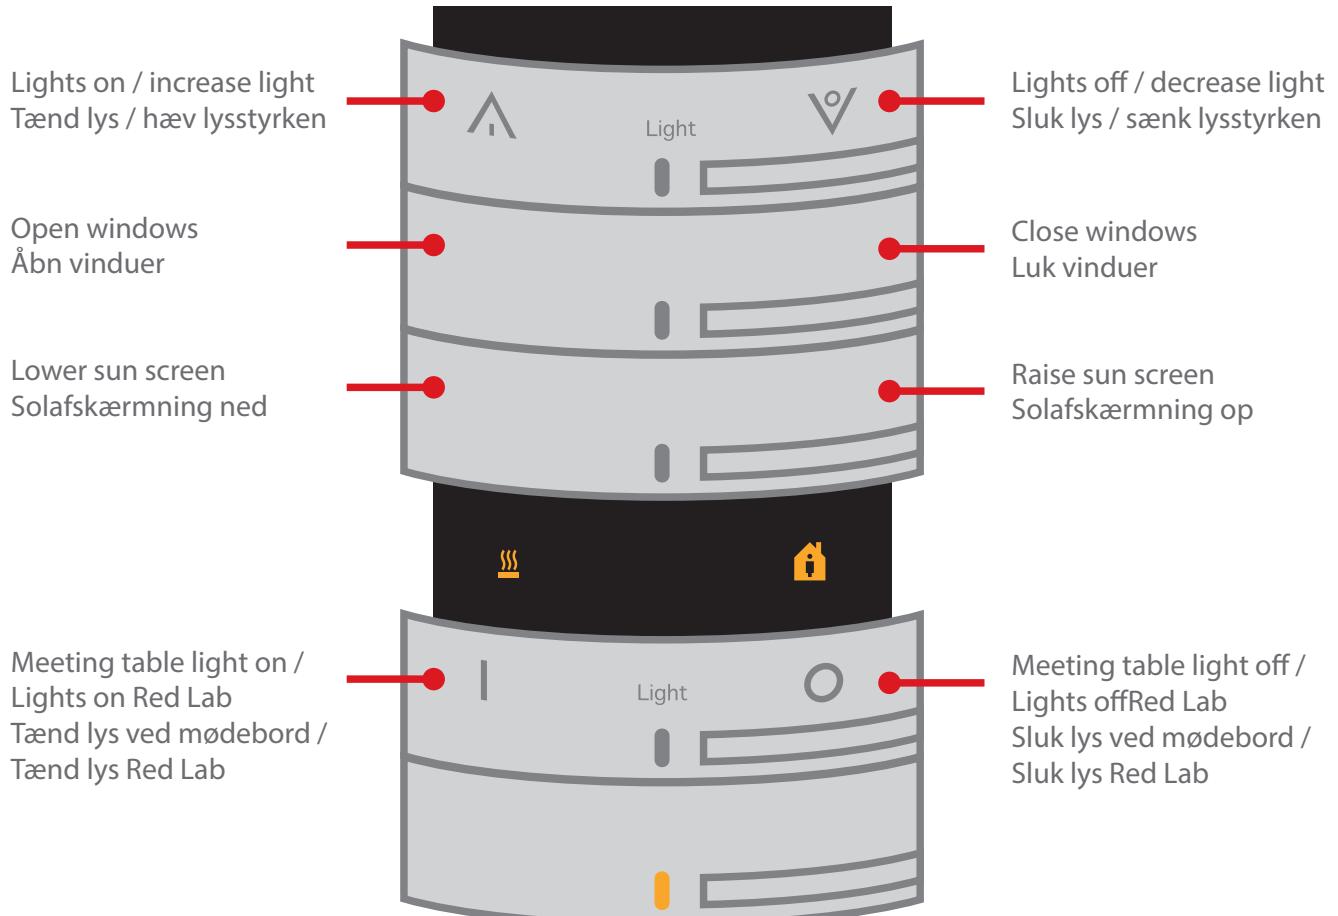

Press only one button at a time / Tryk kun på én knap ad gangen

Setting room temperature Indstilling af rumtemperatur

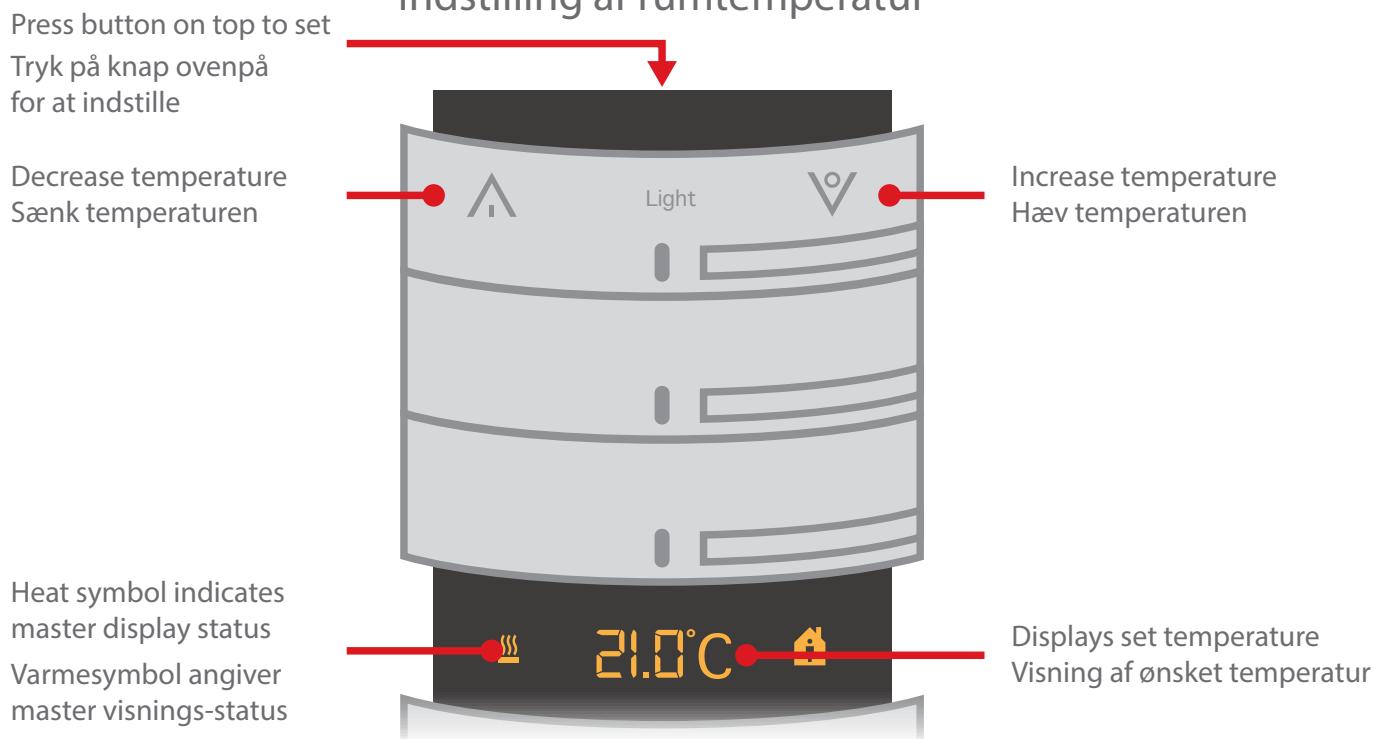

Temperature resets to default every night. Desired temperature must be entered each day.
Varmen returnerer til basis hver nat. Ønsket temperatur i rummet skal stilles hver dag.